Elcometer 145

Dust Tape Roller

Operating Instructions



elcometer Limited.

All other trademarks acknowledged.

© Copyright Elcometer Limited. 2012

All rights reserved. No part of this Document may be reproduced, transmitted, transcribed, stored (in a retrieval system or otherwise) or translated into any language, in any form or by any means (electronic, mechanical, magnetic, optical, manual or otherwise) without the prior written permission of Elcometer Limited.

A copy of this Instruction Manual is available for download on our Website via www.elcometer.com.

CONTENTS

Section		Page
1	About this accessory	2
2	Using this dust tape roller	3
3	Calibration	5
4	Maintenance	5
5	Technical Specification	5
6	Accessories	6

s elcometer[®]

Thank you for your purchase of this Elcometer 145 Dust Tape Roller. Welcome to Elcometer.

Elcometer are world leaders in the design, manufacture and supply of inspection equipment for coatings and concrete. Our products cover all aspects of coating inspection, from development through application to post application inspection.

Elcometer are world leaders in the design, manufacture and supply of inspection equipment. Our products cover all aspects from development through application to post application inspection. With the purchase of this product you now have access to the worldwide service and support network of Elcometer. For more information visit our website at www.elcometer.com

1 ABOUT THIS ACCESSORY

The Dust Tape Roller is used with the Elcometer 142 ISO 8502-3 Dust Tape Test Kit to press the tape to the surface using a controlled constant force between 39.2 and 49.0 N (8.8 and 11.0 lb_F) as described in section 6.2 of the Procedure given in BS EN ISO 8502-3 (BS 7079-B3:1993).

1.1 WHAT THE BOX CONTAINS

- Elcometer 145 Dust Tape Roller
- Operating Instructions


The Elcometer 145 Dust Tape Roller is packed in a cardboard and foam package. Please ensure that this packaging is disposed of in an environmentally sensitive manner. Consult your local Environmental Authority for further guidance.

To maximise the benefits of this instrument please take some time to read these Operating Instructions. Do not hesitate to contact Elcometer or your Elcometer supplier if you have any questions.

2 USING THIS DUST TAPE ROLLER


- Remove approximately 200mm (8") of tape from the Elcometer 142 Dust Tape Kit (Part number E142----1).
- 2. Place on surface to be tested.

3. Place the roller on the tape (at one end) and push down so all 4 wheels are on the substrate.

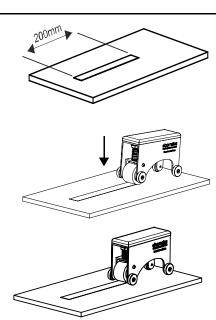


s elcometer[®]

 Move backwards and forwards over the tape three times in each direction, each stroke taking for 5-6 seconds leaving approximately 50mm (2") free.

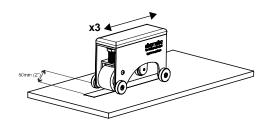

5. Remove tape and assess using the Elcometer 142 Dust Tape Kit.

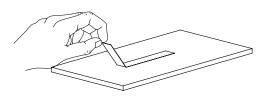

3 CALIBRATION

The calibrated force is applied to the rubber roller when the top of the unit is pressed down so that the front wheels are on the surface of the substrate next to the tape.

In the event that re-calibration is required the Elcometer 145 Dust Tape Roller should be returned to your local Elcometer supplier or direct to Elcometer.

4 MAINTENANCE

Elcometer products are designed to give many years reliable service under normal operating and storage conditions. The Elcometer 145 Dust Tape Roller does not contain any user-serviceable components. In the unlikely event of a fault, the product should be returned to your local Elcometer supplier or direct to Elcometer. The warranty will be invalidated if any unauthorised attempt to adjust the roller spring assembly instrument has been made.

5 TECHNICAL SPECIFICATION

Load exerted:	39.2 to 49.0 N,(8.8 and 11.0 lb _F) when spring fully depressed
Size:	105 mm x 70 mm x 165 mm (4.13" x 2.76" x 6.50")
Weight:	615 g (21.7 oz)

6 ACCESSORIES

Elcometer 142 Dust Tape Test Kit	E1421		
Test Record Sheet Pad (25 sheets)	T14219451		
Display Board	T14219454		
Dust Assessment Plate	T14219525		
Adhesive Tape for Elcometer 142 Dust Tape Test Kit (1 roll)	T14223003		

a elcometer[®]